


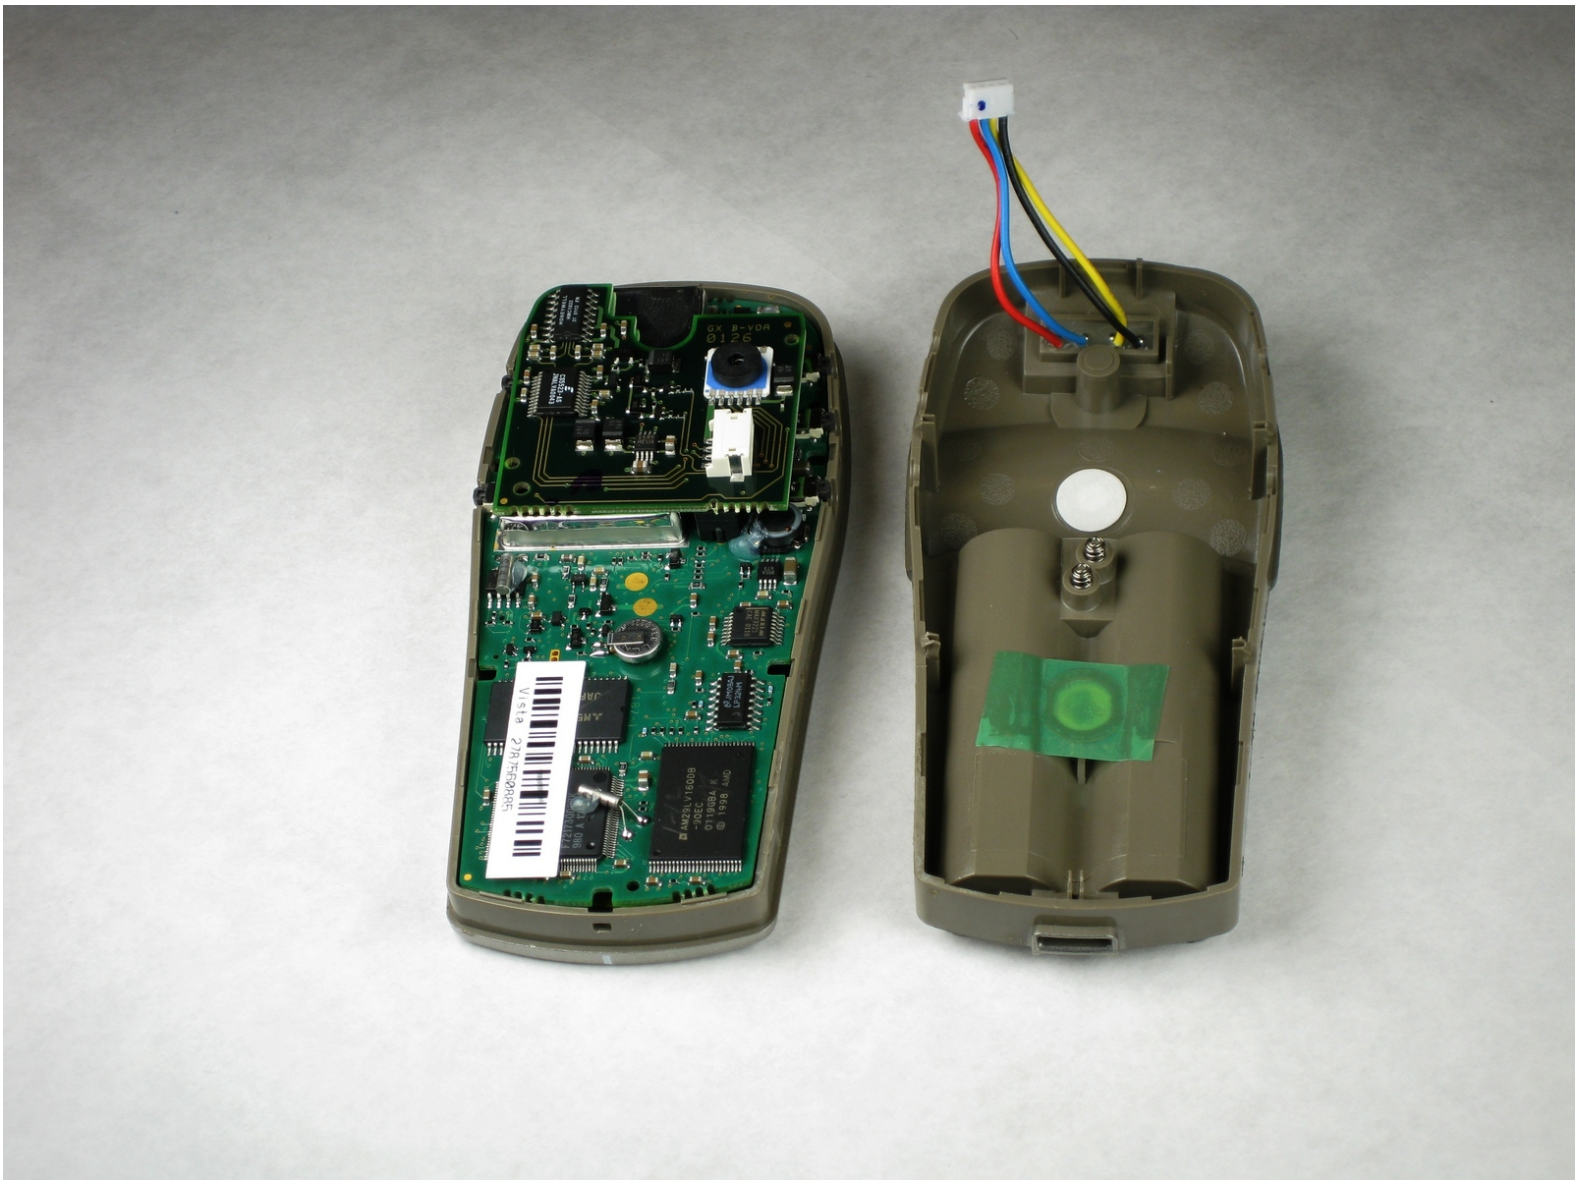

Disassembling the Garmin eTrex Vista-H Outer Case

This guide will show you how to disassemble the outer case of the Garmin eTrex Vista-H to access the inside of the device.

Written By: Ryan Green



INTRODUCTION

This guide will allow you how to access the internal components of the device.



TOOLS:

- [Tweezers](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Removing Battery



- Flip the device to the backside, and locate the metal tab at the center of the back cover.

Step 2



- Lift the metal tab up, and rotate it counterclockwise. This will unlock the back case cover.

Step 3




- Lift the battery plate off to either insert or remove 2 AA batteries.

Step 4 — Disassembling the Garmin eTrex Vista-H Outer Case



- With the wedge side of a spudger (or a small, flat head screwdriver), remove the black rubber case support from the device body.

Step 5

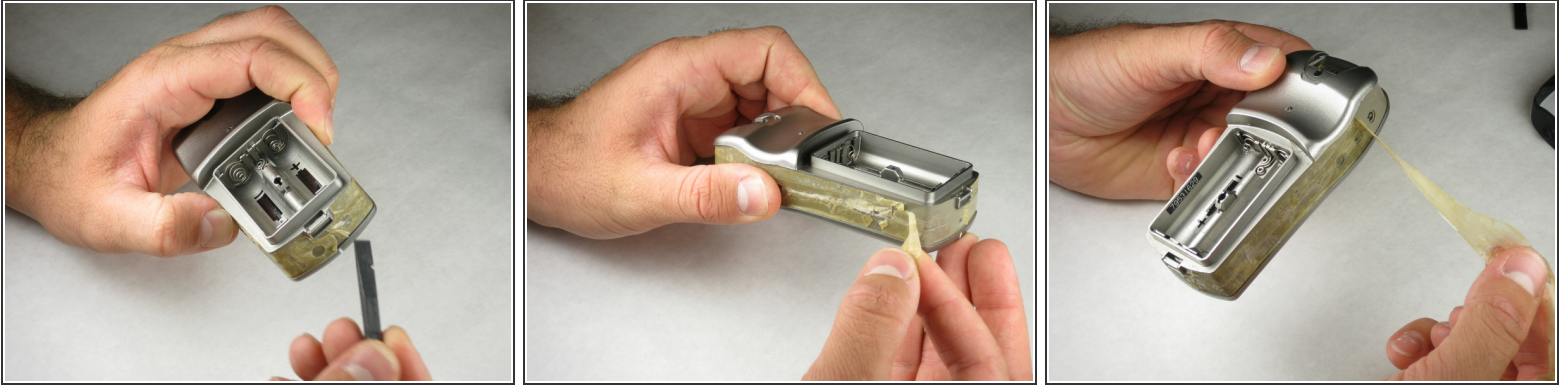

- With the pick side of a spudger (or tweezers), peel the sticky tape from the device.

Step 6




- Split the front and rear panels by inserting a small pointed tool (such as a pen point or a screwdriver tip SL1.5) in the 5 plastic tabs along the sides of the device.

⚠ Do not remove the back panels quickly. If too much force is applied, there is a wire connection that will break.

⚠ CAUTION! Be careful not to force the tabs inward. This will result in broken tabs.

Step 7

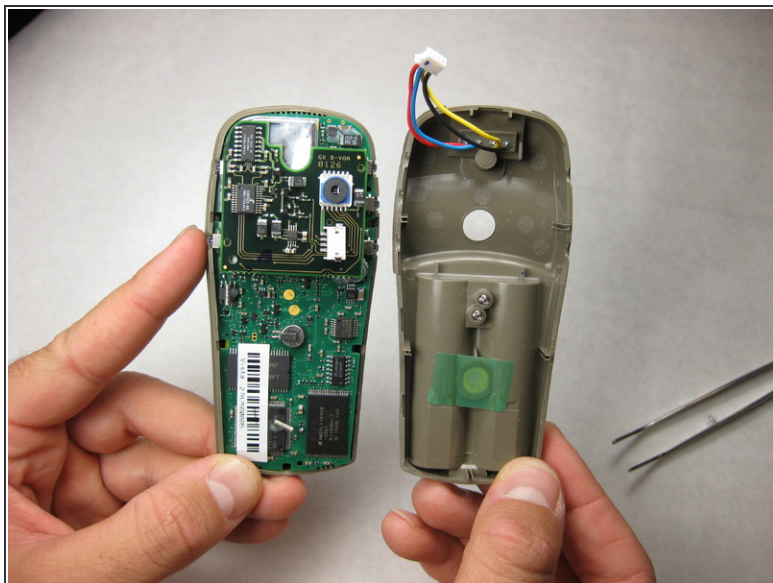

- With tweezers (or your fingernails), carefully disconnect the wires between the PC input and the motherboard.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-20 08:44:35 PM.